

SUPERSEDE


TRUE ALL-TERRAIN GMT




HORAGE

Overview

- 1 Local Hour Hand
- 2 Minute Hand
- 3 Seconds Hand
- 4 Home Hour Hand
- 5 12/24 hour Day/Night Indicator
- 6 Date Window
- 7 Power Reserve Indicator
- 8 Unidirectional rotatable bezel
- 9 Screw down crown

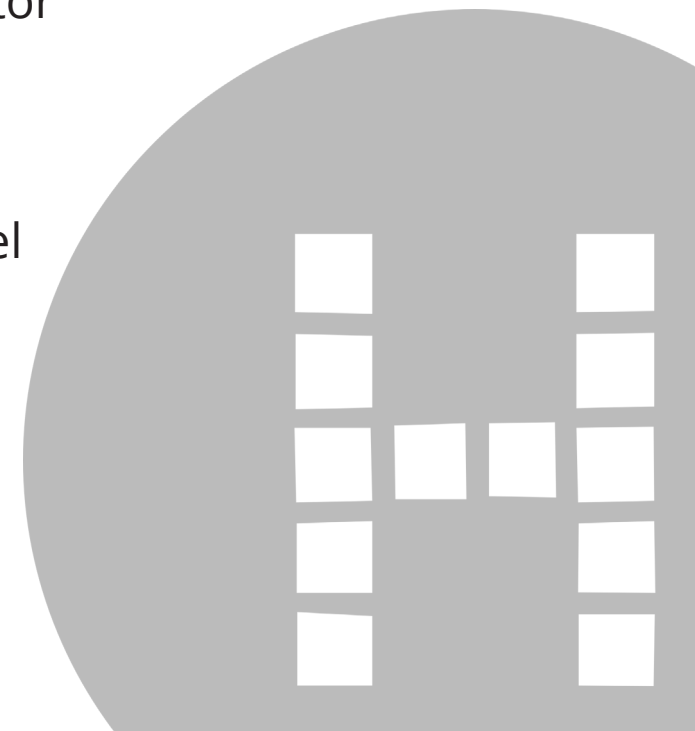

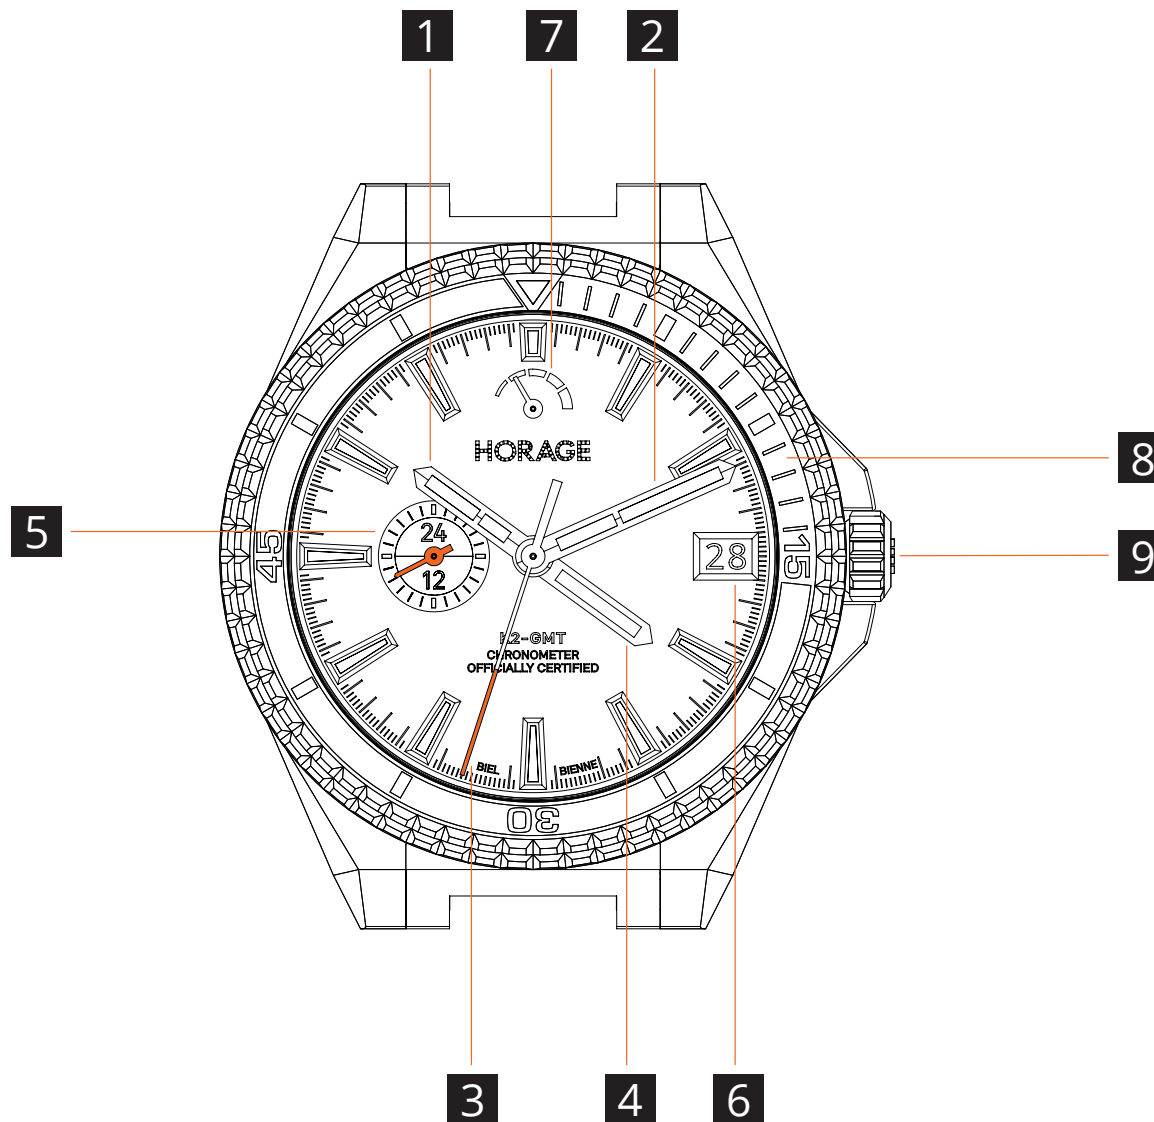



Time setting:

To properly time set it is important to note that Position **3** should be set prior to Position **2**.




Position 0: Screwed-down Position

- The crown is completely screwed against the case.




Position 1: Winding Position

- In this position you can wind the watch manually by turning the crown clockwise.
- As you wind you can see the power in the mainspring increase by looking at the **power reserve indicator**.
- When the power reserve is full you can stop winding.

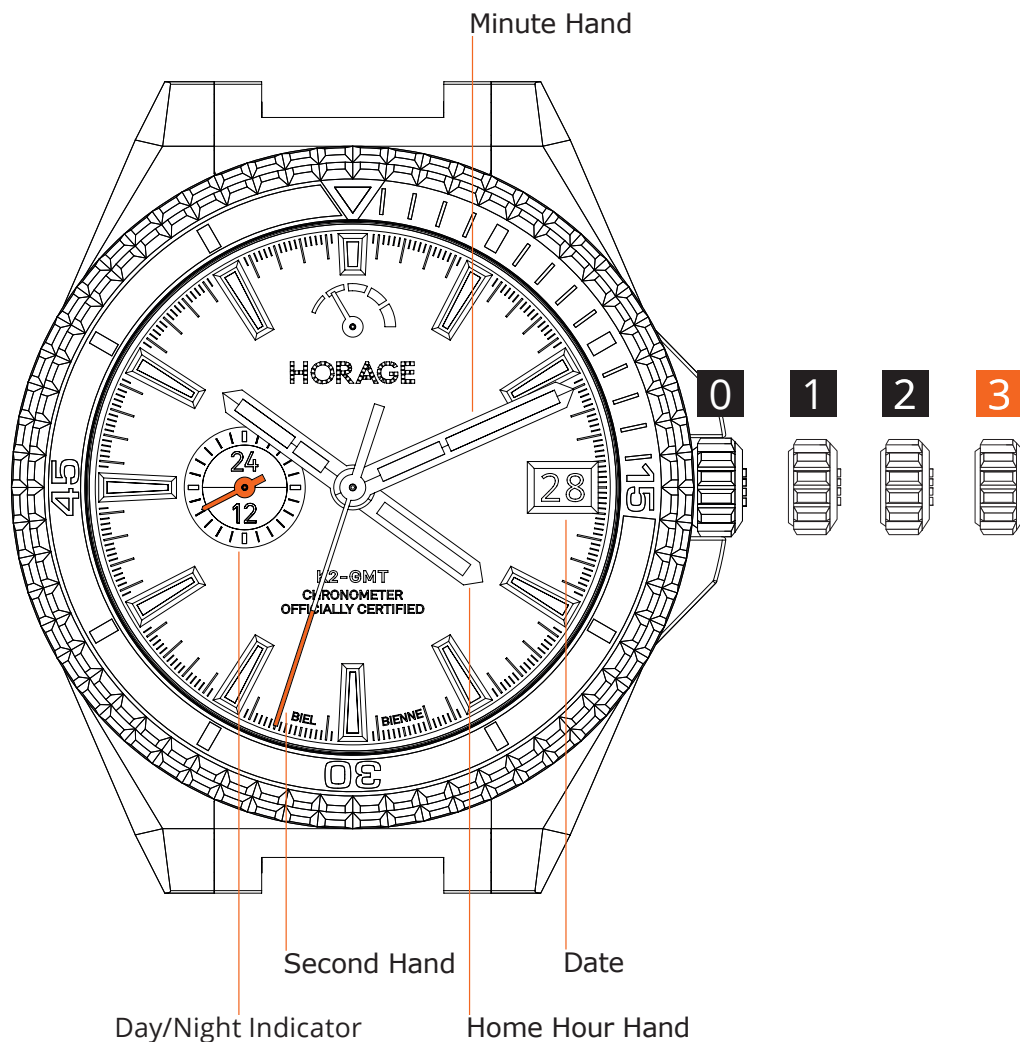


Position 3: Setting Home Time (or reference time)

- With the crown unscrewed pull the crown outwards to the second notch. The **seconds hand** will stop for more accurate time setting.
- Turn the crown clockwise to set the **Home hand** and **minutes** correctly.
- Ensure that the **day/night indicator** matches the correct time of day to the **home hand**.
- You can also set the **date** in this position by continually winding the hands past 12 o'clock however "Position 2" is far faster.
- Once **home** and **minutes** are set push the crown in once to "Position 2". If completely finished with time setting be sure to push in and screw down the crown.

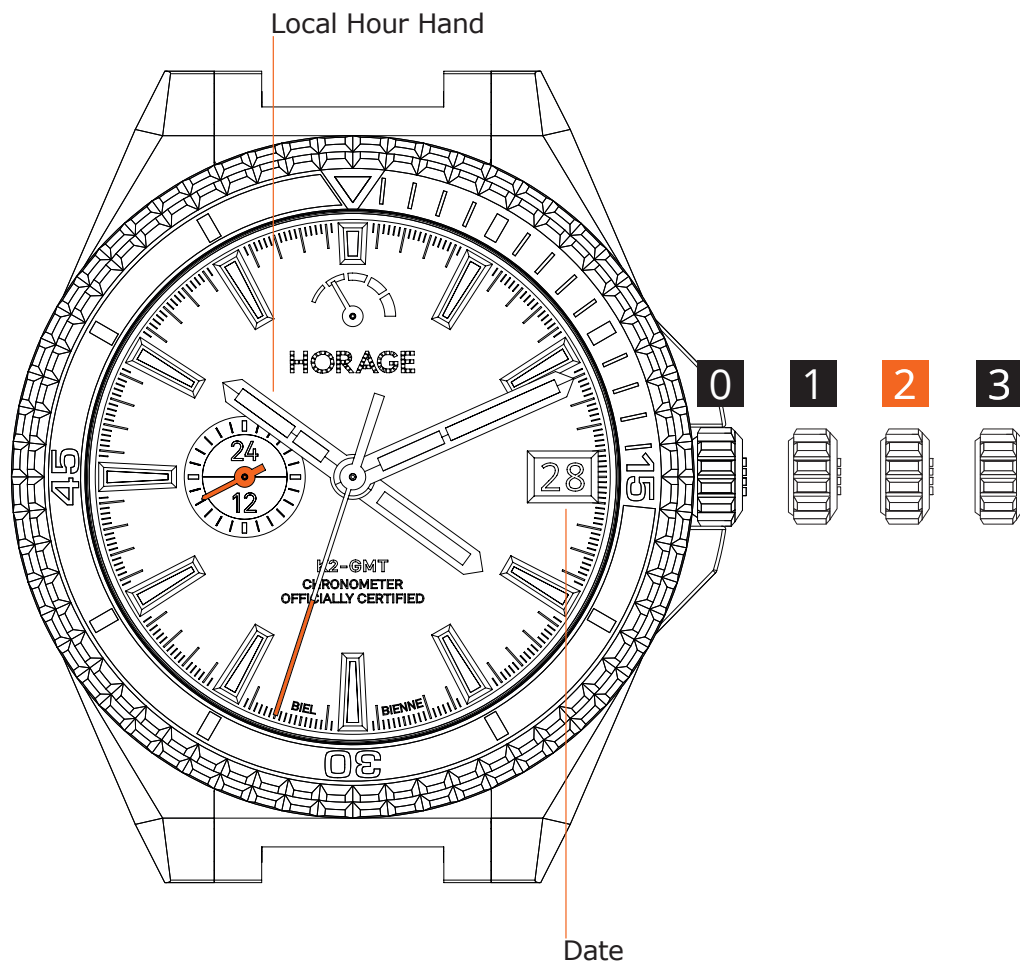

Position 2: Quick Set Date & Local Time

- With the crown unscrewed pull the crown outwards to the first notch.
- Set the **date** by turning the crown counter clockwise. The date will quickly jump through the days.
- Set the **local time** by turning the crown clockwise.
- The **local hand** will jump in one hour increments.
- Take note that the **date** is linked to the **local hand**.
- Once set be sure to push in and screw down the crown.

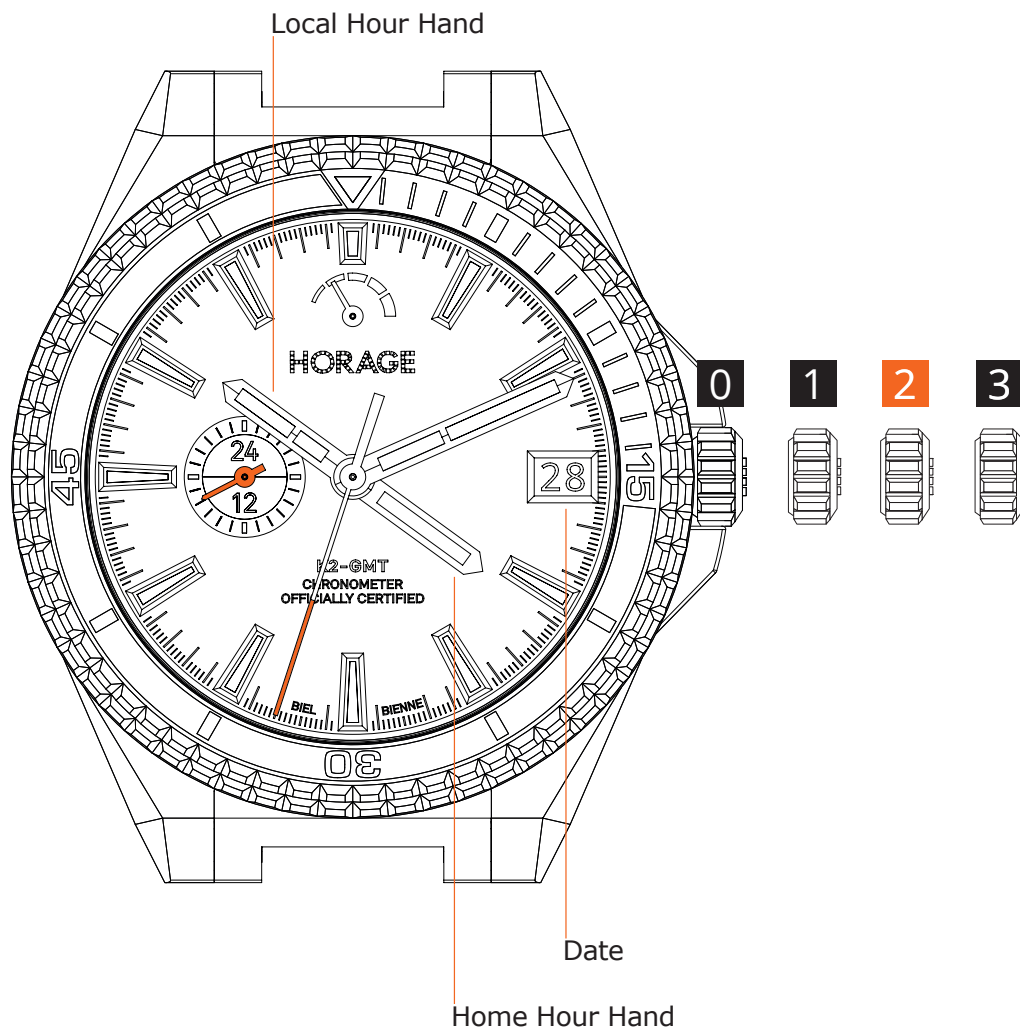

Advice for Travelling

- When travelling adjust **local time** only and keep the **home time** or reference the same. This ensure accurate minutes and seconds are kept.
- Unscrew crown and pull out to the first notch (Position 2).
- Set local time by simply turning the crown clockwise.
- The **local hour hand** will move in hour increments.
- The **date** is linked to the **local hour hand** and the **date** will change automatically when the **hour hand** passes midnight.

HORAGE SA Fuchsenried 10
2504 Biel/Bienne Switzerland
www.horage.com

HORAGE